

DD51-E | Electronic digital position indicator

direct drive, 5-digit display, technopolymer



BASE AND CASE

High-resistance polyamide based (PA) technopolymer.
Black base.

Case in the following colours:

- **C1**: RAL 7021 grey-black, glossy finish.
- **C2**: RAL 2004 orange, glossy finish.
- **C3**: RAL 7035 grey, glossy finish.
- **C55**: RAL 5005 blue colour, glossy finish.

Cover with perfectly sealed gasket and AISI 304 stainless steel UNI 6955 type self-tapping screws with six-lobe socket TORX® T06 (registered trademark by TEXTRON INC.).

The bonding between the base and the containment case using a high-performance sealant, in addition to preventing the penetration of dust and liquids, prevents them from detaching during use.

BOSS

AISI 304 stainless steel with $\varnothing 14$ mm H7 reamed hole, fitting to shaft by means of AISI 304 stainless steel grub screw, hexagon socket and cup end UNI 5929-85, included in the supply.

WINDOW

Transparent polyamide based (PA-T) technopolymer, moulded over the case and with a perfect seal. Resistant to solvents, oils, greases and other chemical agents (avoid contact with alcohol during cleaning operations).

DISPLAY

- 5-digit LCD of 8 mm height and special characters.
- The visualization parameters can be set and modified by the operator by means of appropriate keys:
- values displayed in mm, inches or degrees
- display of mode for use (absolute or incremental mode)
- reading orientation (right or reverse).

KEYBOARD

Polyester membrane. Resistant to solvents, alcohol, acids, alkalis.

INTERNAL GASKET

O-ring front sealing in NBR synthetic rubber, between the case and the boss.

Brass bushing with double O-ring sealing in NBR synthetic rubber inside the rear cavity of the base (DD51-E-SST-IP67).

REAR GASKET


Foam polyethylene, supplied.

STANDARD EXECUTIONS

- **DD51-E-SST-IP65**: completely sealed indicator with IP 65 protection class, see EN 60529 table (on page A-19).
- **DD51-E-SST-IP67**: completely sealed indicator with IP 67 protection class, see EN 60529 table (on page A-19) obtained by means of a brass bushing with double seal ring inside the rear cavity of the base.

ASSEMBLY INSTRUCTIONS

1. Drill a $\varnothing 6$ mm by 10 mm hole in the body of the machine with a 22 mm centre distance from the spindle to fit the rear referring pin.
2. Fit the indicator onto the spindle and make sure that the referring pin fit the hole.
3. Clamp the boss to the spindle by tightening the grub screw with hexagon socket and cup end, according to UNI 5929-85.

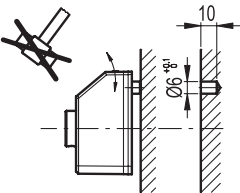


ELESA Original design

ACCESSORIES ON REQUEST (TO BE ORDERED SEPARATELY)

- **MDX-51**: polyamide based (PA) technopolymer knob.
- **RB51-SST**: AISI 304 stainless steel reduction sleeves.

RB51-SST		INOX STAINLESS STEEL	
Code	Description	dH7	
CE.95941	RB51-6-SST-304	6	20
CE.95951	RB51-8-SST-304	8	17
CE.95956	RB51-10-SST-304	10	11
CE.95961	RB51-12-SST-304	12	8


- **BSA51-E**: die-cast zinc alloy bases for spindle locking, epoxy resin coating, black colour, matte finish. GN 302.1 adjustable handle with die-cast zinc alloy lever body and AISI 304 stainless steel clamping element. A $\varnothing 6.1$ mm hole to fit the referring pin of the indicator. Handle positioned either on the right or on the left. Fitting to the machine by means of two M4 cylindrical-head screws (not included in the supply).

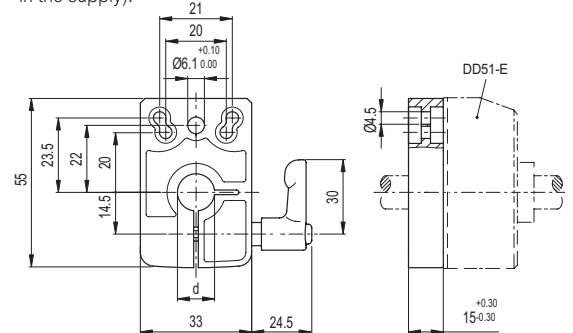

Code	Description	dH7	
CE.85925	BSA51-E-8	8	141
CE.85927	BSA51-E-10	10	167
CE.85929	BSA51-E-12	12	134
CE.85931	BSA51-E-14	14	131




FEATURES AND APPLICATIONS

DD51-E position indicators, with battery power supply, can be used on passing through shafts in any position to provide the reading of the absolute or incremental positioning of a machine component. The 5-digit display of 8,0 mm height ensures excellent readability even from a distance and from different viewing angles. The window in transparent technopolymer protects the LCD display against accidental shocks. The high protection degree, IP 65 or IP67, makes the indicator suitable for applications that require frequent washing, even with intense water jets. The product is not suitable for use in continuous total or partial immersion. In the operating mode, by using the 3 function keys, it is possible to select the incremental or the absolute mode, the unit of measure (mm, inches or degrees), reset the absolute counter or load a preset source value and the preset offset value. In the programming mode, through the 3 function keys, it is possible to program the reading after one revolution of the shaft, the direction of rotation, the display orientation, the resolution (number of decimal digits displayed), the source value and the offset value, the max. speed of rotation and set the functions of the keys among different options available. The internal battery has a battery life up to 3 years. A specific symbol appears on the display when the battery needs replacing. It is easy to replace the battery by removing the front cover (Fig. 1) without having to remove the indicator from the drive shaft and without losing the configuration parameters. Further technical information available in "Operating instructions".

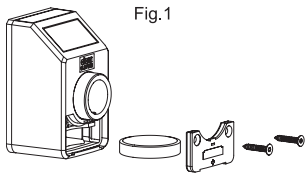

DD51-E-SST-IP65

DD51-E-SST-IP67

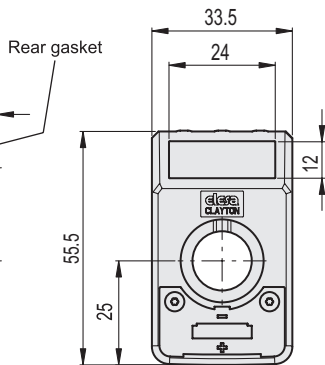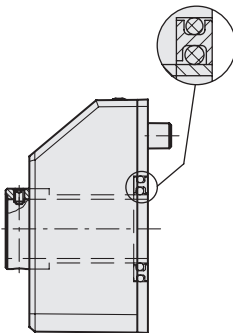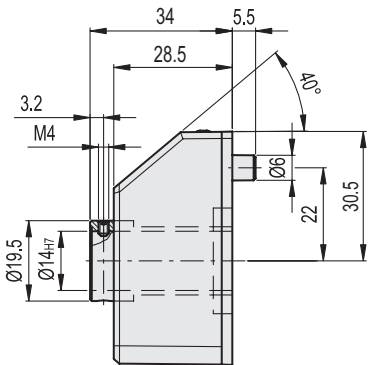

- C1 RAL7021
- C2 RAL2004
- C3 RAL7035
- C55 RAL5005



Code	Description	⚖
CE.99003	DD51-E-SST-IP65-C1	67
CE.99002	DD51-E-SST-IP65-C2	67
CE.99001	DD51-E-SST-IP65-C3	67
CE.99005	DD51-E-SST-IP65-C55	67
CE.99013	DD51-E-SST-IP67-C1	72
CE.99012	DD51-E-SST-IP67-C2	72
CE.99011	DD51-E-SST-IP67-C3	72
CE.99015	DD51-E-SST-IP67-C55	72



OPERATING INSTRUCTIONS

Electronic digital position indicators

DD51-E-RF *(GN 9154)**

**(Product series valid only for Germany)*

elesa[®]

Contents

1. Safety Instructions	4
1.1 Product release information	5
2. Description	6
2.1 Version - DD51-E-RF	7
3. Installation	7
4. Display	8
5. Key functions	8
6. Switching on/off the device	11
6.1 Switching on the device	11
6.2 Switching off the device (for storage only)	11
7. Operating mode	12
7.1 Reference points, origin and offset	12
7.2 Resolution	13
7.3 Absolute or relative measure selection	13
7.4 Unit of measure selection	14
7.5 Reference measurement reset	14
7.6 Reference point setting	14
7.7 Direct programming of Origin, Offset and Step parameters	15
7.8 Targets	16
7.8.1 Programming the targets	16
7.8.2 Load a target	16
7.8.3 Indications for reaching the target position	16
7.8.4 Disabling the target	17
7.8.5 Display in target mode	17

7.9. Version - DD51-E-RF	18
7.9.1 Programming the Net ID and Net CH parameters	18
7.9.2 Targets	19
8. Programming mode	19
8.1 Input of numeric parameters	19
8.2 Programmable parameters (in alphabetical order)	20
8.3 Main menu tree	23
8.4 Target menu tree	25
8.5 Additional functions	25
8.5.1 Reset	25
8.5.2 LCD test	25
8.5.3 Device version	26
8.5.4 Password	26
9. Battery replacement	26
10. Display messages and troubleshooting	27

1. Safety Instructions

This device has been designed and manufactured in accordance with current legislation. To keep the product in this state, it must be assembled and used correctly, in strict compliance with the instructions contained in this instruction manual and with the following specific safety precautions. This manual is intended as an indispensable supplement to the existing documentation (catalogues, data sheets and assembly instructions). Make sure that the user has read and understood the instruction manual and in particular this chapter "Safety instructions". In addition to the instruction manual, all legal regulations regarding accident prevention and environmental protection must be observed. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.' This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates,uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

IMPORTANT NOTE (only for RF version): To comply with FCC RF exposure compliance requirements, the antenna used for this transmitter not be co-located or operating in conjunction with any other antenna or transmitter.



Use without respecting the specific descriptions/ parameters, in combination with systems/ machines/processes to be controlled, can lead to product malfunction, which causes:

- health hazards,
- environmental hazards,
- damage to the product and to its proper functionality.

The device must not be used:

- in explosion hazard areas;

- in medical/life support areas and equipment.

Do not open the equipment and do not apply any modifications!

Modification of the equipment could adversely affect the reliability of the device and could lead to hazards! Do not

attempt any repairs. Always return any defective equipment to the manufacturer! Any breach of the integrity of the device as delivered will invalidate the warranty. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Configuration / Commissioning

In the event of abnormal behaviour (including change of operating conditions), the device must be shut down immediately. Installation and commissioning must only be carried out by adequately trained and authorised personnel. After correct assembly and commissioning, the device is ready for operation.

Maintenance/repair

Switch off the power supply to the equipment before carrying out any operation. Maintenance must be performed only by trained and authorised persons.

Do not open or modify the indicator case. Tampering with this product can compromise the correctness and accuracy of its function. In the event of a malfunction, do not attempt to repair the unit.

1.1 Product release information

Although almost all features are the same as in previous releases, this manual specifically refers to devices updated to firmware revision 6.0 or later.

Some menu items may not be described as they relate to functionalities that are additional, experimental or reserved for special use. In case of specific need, it is recommended to ask the Elessa service staff for assistance.

Elessa reserves the right, without further communication, to make improvements, additions, corrections to the menu items, that do not modify or affect the described functionality of the product but are necessary for the continuous improvement to which these products are subjected.

2. Description

The DD51-E position indicators, with battery power supply, can be used, mounted on pass-through shafts, to provide the reading of the absolute or relative positioning of a machine component.

Mechanical and electrical characteristics

Power supply	Lithium battery CR2450 3.0 V
Battery life	Up to 3 years (up to 2 years for RF version)
Display	5-digit LCD of 8 mm height and special characters
Reading scale	-19999; 99999
Number of decimal digits	programmable
Unit of measure	mm, inches, degrees programmable
Rotation max. speed	300/600/1000 r.p.m. ⁽²⁾ programmable
Resolution	10.000 impulses/revolution
Protection level	IP65 or IP67
Working temperature	0 °C ÷ +50 °C
Storage temperature	-20 °C ÷ +60 °C
Relative humidity	max. 95% a 25 °C without condensation
Environment	indoor use
Conditions of use	For use in closed and sheltered places only
Altitude	up to 2000 m
RF frequencies (RF devices only)	2400-2416MHz

⁽²⁾ Default: 600 r.p.m.

A rotation speed higher than 600 rpm can only be maintained for short periods of time.

The maximum speed value affects the battery life.

Battery life depends on the conditions of use (setup, temperature, ...). The indicated value is an estimate made in temperature conditions > 20 °C and <30°C and default setup.


Furthermore, this value refers to the condition of the device when it leaves the Elessa factory. Long storage times must always be considered for the estimation of the battery life when the device becomes operational.

2.1 Version – DD51-E-RF

The DD51-E-RF is compatible with Elesa wireless network which allows meters and electronic indicators to communicate via radio with a PLC.

Elesa wireless network is made by the following components:

- One control unit UC-RF
- Max 36 device as DD51-E-RF, DD52R-E-RF or MPI-R10-RF

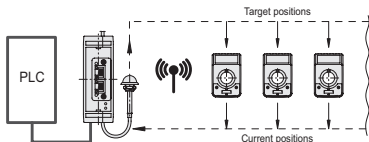


The UC-RF exchanges information with the DD51-E-RF via radio frequency and makes it possible to set the target position and check the current position of each indicator. Through an interface, available for the most common industrial buses (ProfiNet, Ethernet/IP, Modbus/TCP, and others), the UC-RF control unit allows the exchange of this information with a PLC and/or a generic controller of the machine.

3. Installation


1. Drill a $\varnothing 6 \times 10$ mm hole in the machine body with a 22 mm centre distance from the shaft for mounting the rear reference pin.

2. Mount the indicator on the shaft and make sure the reference pin fits into the hole.

3. Lock the bushing on the shaft by tightening the grub screw with a 2.5 mm hexagon socket (as per UNI 5929-85).

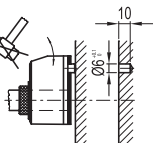


4. Display

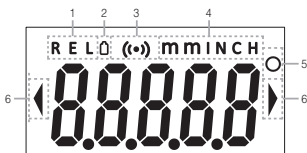





1. Relative mode indicator
2. Low battery level indicator
3. Connection indicator (only for DD51-E-RF)
4. Unit of measure: mm, inch
5. Unit of measure: degrees
(in the version with FW 6.1.99 the indication of the unit of measurement in degrees is a D in position 4)
6. Target position indications
(these indicators are absent in the version with FW 6.1.99)

5. Key functions



Key Or Key Combination	Operating Mode	Programming Mode
	<p>Keeping the key pressed down for 3s activate programming mode.</p> <p>When in target mode, it reacts to a short press according to the setting of item ____0 of the main menu (chap. 8.3):</p> <p>d_tArG: When a target is loaded, the display shows the current absolute position. By pressing the key, the position of the destination to be reached appears on the display.</p> <p>d_toG0[DEFAULT]: when a target is loaded, the display flashes the distance from the current position to the target position to be reached. By pressing the key, the current absolute position will appear on the display.</p> <p>OFF: the function is disabled.</p>	<p>Select the item menu or confirm selection or insertion of the parameter value</p>

	<p>Select the measure mode:</p> <p>ABS: absolute measure mode</p> <p>REL: relative measure mode</p> <p>It is possible to choose one of the following options (see item 0_0_0_0 of the menu - chap.8.3):</p> <p>ArCLr [DEFAULT]: when changing from ABS to REL the counter is reset</p> <p>Ar: when changing from ABS to REL the counter is not reset.</p> <p>OFF: the function is disabled.</p>	<p>Digit increase selected / exit</p>
	<p>Unit of measure selection.</p> <p>The available options are: millimetres, inches and degrees.</p> <p>It is possible to choose one of the following options (see item 0_0_0_0 of the menu - chap. 8.3):</p> <p>ALL [DEFAULT]: selectable units of measure: mm, inch, D</p> <p>nodeG: selectable units of measure: mm, inch</p> <p>OFF: the function is disabled.</p>	<p>Scroll down the list of possible selections or menu items / select the next digit</p>
	<p>Programmable for one of the following functions (see menu item 0_0_0_0 - chap.8.3):</p> <p>P_0rG [DEFAULT]: shows and allows you to set the 0rigin parameter.</p> <p>P_0FS: shows and allows you to set the 0FFS parameters.</p> <p>P_StP: shows and allows you to set the StEP parameters.</p> <p>OFF: the combination is disabled.</p>	<p>N/A</p>



	<p>In relative measure mode, resets the measure.</p> <p>In absolute measure mode it is programmable for one of the following functions (see menu item _ _ 0 _ 0 – chap.8.3):</p> <p>L_OFS [DEFAULT]: select one of the offsets (see chap.7.6 and 7.7).</p> <p>SetOrg: the key combination allows to reset the origin (see chap. 7.5)</p> <p>OFF: the combination is disabled.</p>	N/A
---	--	-----

Note: the words: increase, decrease, up and down, refer to the direction of the arrow in the default configuration as shown in the figure. By changing the orientation of the display, the meaning of the keys is reversed accordingly.

6. Switching on/off the device

6.1 Switching on the device



After reading and understanding the “Safety Instructions” section, proceed by switching on the indicator.

To switch on the indicator, hold down  while pressing the key . The display will switch on and the indicator will be ready for use.

ATTENTION: When the device is turned on, especially after a long period of storage, it is possible that some segments of the display remain abnormally lit during the startup phase. The phenomenon is transitory and does not affect correct operation and use of the device as it will disappear in a short time.

6.2 Switching off the device (for storage only)

To switch the system off:

- select the **rESEt** item from the main menu (see chap.8.3)
- using the key , scroll through the items to select OFF.
- press the key  to confirm. The display will switch off and the indicator will go into sleep mode.

7. Operational mode

7.1 Reference points, origin and offset

When the device is turned on or reset, the position of the shaft at that moment is set as the origin of the measure.

The value attributed to this position is given by the parameters, Origin and Offset, which can be set by the user. Origin is an arbitrary number that can be set in the range $-19999 \div 99999$ depending on the resolution set and is to be considered as the machine's limit switch value in its default conditions. The offset is added to Origin which is always an arbitrary value that can be set in the range $-19999 \div 99999$ depending on the resolution and which allows you to move the actual origin of the measure based on any changes in the machine configuration.

For example, a certain set point can operate different tools with relative displacements of the point of origin. For example, in the case of a tube cutting machine the device indicates the position of the stop that determines the length of the tube. The limit switch point is fixed but it does not necessarily correspond to a zero length of the tube and therefore Origin will be different from zero but always the same.

However, the machine makes it possible to mount different blades depending on the type of tube and these can have different positions and/or thicknesses. Therefore the actual length will have to be corrected with a determined value which will be memorised as an offset.

For greater flexibility of use, the DD51-E permits storage of up to 10 different offset values. To program the offset values see the OFFS parameter in chap. 8.2.

However, during installation and for other specific applications, it is useful to be able to reset the internal reference value in another position. For this purpose, see chap. 8.5.1.

WARNING: The value of the Origin parameters and the offsets are the same for the mm and inch units of measure and are displayed, depending on the unit of measure in use (see chap. 7.4), with the appropriate conversion coefficient. In the case of degrees, these parameters are totally different and independent from the previous ones.


7.2 Resolution

The device manages different measure display resolution values for each of the three units of measure managed (mm, inch and degrees). The same display resolution set is used to set different parameters such as Origin, offsets and targets.

WARNING: If the resolution of one of the units of measure is changed, to avoid setting errors, all the parameters that are affected are reset: Origin, offset, etc.: It is therefore advisable to decide and set the display resolution of all units of measure as a first step in installing the device. To make the most of the device's measure capacity, the resolution is automatically reduced if the measure to be displayed exceeds the capacity of the display. The measure on the display will flash.

In this case, the resolution variation is temporary (it is restored if the display is able to display the measurement with the set resolution) and has no effect on the set parameters.

7.3 Absolute or relative measure selection

Press the key  to select the absolute or relative measure mode. The relative measure mode is indicated on the display by the symbols:

ABS : *absolute measure mode*

REL : *relative measure mode*






It is possible to change the function of the key by choosing one of the options available in the menu item __ 0 __

The available options are:

- **ArCLr**(default): when changing from **ABS** to **REL** the counter is reset.

- **Ar**: when changing from **ABS** to **REL** the counter is not reset. In both cases, only in relative measure mode, the counter is set

to zero by pressing  + .

- **OFF**: the key  is disabled and it is not permitted to change the measure mode.

7.4 Unit of measure selection

Press the key  to select the required unit of measure.

The available options are millimetres, inches and degrees.

The selected measure mode is indicated on the display by the symbols:


- **mm**: millimeters
- **INCH**: inches
- **D**: degrees



It is possible to change the function of the key by choosing one of the options available in the menu item. 0 _ _ _ _



The available options are:

- **ALL** (default): selectable units of measure: mm, inches and degrees.
- **nodEG**: selectable units of measure: mm, inch


- **OFF**: the key  is disabled and it is not permitted to change the selected measure mode.

7.5 Reference measurement reset

It is possible to reset the internal reference of the measure device of the device for the measurement by enabling the

appropriate SetOrg function of the pair of keys  + , to reset the internal reference see chap. 7.6.

In this case when the two keys are pressed at the same time, the message SEtOrg is displayed.

Pressing the button  to confirm the choice and to reset the origin point to the current position. Alternatively, the Reset command can be used as described in chap. 8.5.1.



7.6 Reference point setting

Using this key combination  +  it is possible to reset the measure references of the device by loading the origin value and an offset value (see chap. 7.1).











It is possible to change the function of the key combination by choosing one of the options available in the menu item __ 0 _ 0

The available options are:


- **L_OFS**: the key combination allows you to select an offset .
- **SEtOrg**: the key combination allows to reset the origin (see chap. 7.5).
- **OFF**: the key combination  +  is disabled.

WARNING: This function is available only in absolute measure mode.

If the OFFS option has been selected, pressing the key combination  +  will display the last used offset value (e.g. OFFS 0). It is possible to choose the desired compensation value among the 10 memorized by pressing the key . Then, by pressing the key , the selected offset value will be loaded and used in the measurement. By pressing the key , the operation will be cancelled. If the SEtOrg option has been selected, pressing the key combination  +  the screen will show SEtOrg. By pressing the key , the origin of the measurement will be moved to the current position and the display will show the value of the origin point given by the value of Origin + Offset.

7.7 Direct programming of Origin, Offset and Step parameters

The key combination  +  allows direct access to the programming of one of the following parameter: Origin, Offset or Step.

 **0 _ _ _ 0** | It is possible to change the function of the key combination by choosing one of the options available in the menu item 0 _ _ _ 0.

The available options are:

- **P_OrG**: direct programming of the absolute reference value (Origin parameter)
- **P_StP**: direct programming of the reading after one revolution (Step parameter)
- **P_OFS**: direct programming of the offset value (OFFS

EN

parameter).



- **OFF**: the key combination  +  is disabled.

7.8 Targets

The DD51-E allows you to set up to 32 target positions allowing you to store any relevant and frequently used settings.





7.8.1 Programming the targets

To program the targets:

- select **tArGE** in the main menu (see chap. 8.3)
- select **PrOGt** (see chap. 8.4)
- select the desired memory location (from **PtG01** to **PtG32**) using the key .
- press the key  to select.
- follow the instructions in chap. 8.1 to set the desired value.

7.8.2 Load a target:

To load a target:

- select **tArGE** in the main menu (see chap. 8.3)
- select **LOAdt** (see chap. 8.4)
- select the desired target value (from **LtG01** to **LtG32**) using the key .
- Press the key  to select.
- The selected target value is displayed.
- Press  again to confirm or press  to return to the target selection list.

7.8.3 Indications for reaching the target position

When a target is selected it is sent by the PLC (RF version only), the device will suggest the direction of rotation of the shaft to reach the target through the symbols ◀ ▶ of the target position indicators (from fw version 6.2).

It is possible to set an acceptable tolerance value for the targets through the **PtOLL** parameter so that the target position is considered to have been reached when the

difference between the set target and the current position is less than **Pt0LL** in absolute value.

The target position ◀ ▶ indicators work, depending on the, **dir** and **Pt0LL** parameters, as in the following table:

T = target value set

M = actual measure

Toll = tolerance (see **Pt0LL**)


	dir --o	dir o--
$M < T - \text{Toll}$	◀ (blinking)	▶ (blinking)
$T - \text{Toll} \leq M < T$	◀	▶
$M = T$		
$T < M \leq T + \text{Toll}$	▶	◀
$M > T + \text{Toll}$	▶ (blinking)	◀ (blinking)

7.8.4 Disabling the target

If a target is active, it can be cancelled by accessing programming mode and selecting the **St0Pt** option.

WARNING: while a target is active, it will not be possible to change the unit of measurement, set the origin and other functions accessible from the keyboard. The absolute or relative measurement function remains available but remember that the target values both stored on the device and sent via RF always refer to the absolute value.


7.8.5 Display in target mode

By pressing the key  when a target is active, you can view the current position or the target position depending on the device settings.




It is possible to modify the function of the key and the target mode by selecting one of the options available in the menu item **----0** (see chap. 8.3)

The available options are:

- **0FF**: the key  is disabled. This setting is related to the target mode. Other functions are not involved.
- **dtArG** (default): when a target is activated, the display shows the actual absolute position and the indication to reach the target (see chap. 7.8.3).

Pressing the key  shows the set target position.

- **dtoGo**: when a target is activated, the display flashes showing the distance from the set target and the indication to reach the target (see chap. 7.8.3). When the target is reached, less than the set tolerance, the display shows the current position and stops flashing.

Pressing the key , the display shows the current absolute position.

7.9 Version - DD51-E-RF

7.9.1 Programming the Net ID and Net CH parameters

Each RF device is defined within the Elessa wireless network by the following two parameters:

net id: this is a number between 0 and 99 and differentiates different subnets allowing different systems to work on the same RF channels.

net ch: this is the RF transmission channel and can be set from 1 to 36. Two or more devices set to the same Net CH cannot have the same Net ID.

These parameters can be configured in the indicator's Radio menu (see chap. 8.2) and must be set according to the PLC settings to ensure perfect communication with UC-RF.

WARNING: In pre-existing systems in which a UC-RF with a firmware release prior to 0F051120 is used (for more information refer to the UC-RF manual) it is necessary to take into consideration that the Net CHs are out of phase by 3 channels. In practice, a DD51-E-RF set with Net CH = 1 will communicate with UC-RF on CH = 4 and so on for the following channels.

It will not be possible for DD51-E-RF with firmware revision 6.0 or later to communicate with older generation UC-RF on channels 1 to 3.





ATTENTION: some NetIDs may conflict with each other, we recommend consulting the document Elessa-R&D-DDEMAN-005-01en - NetID - allowed values - feb 23 and for more detailed information or the UC-RF user manual updated to version R02 or later.

7.9.2 Targets

Using the DD51-E-RF, the target positions can be sent from the PLC to the indicators via the UC-RF control unit. When a target is transmitted, it behaves in the same way described in chap. 7.8.


WARNING: If the target transmission on UC-RF is enabled, it will be refreshed on the DD every time a communication occurs. Consequently, before disabling the target on the device (see chap. 7.8.4), disable the target transmission on UC-RF.

8. Programming mode

Press the key  for 3 seconds to access programming mode. Depending on the setting of the **PASS** parameter (see chap. 8.5.4), the system may ask for a password to be entered. Press the key  to scroll through the list of menu items or parameters and select the desired one by pressing the key . Press the key  to return to the previous menu level (when allowed) or exit programming mode. Programming mode is automatically exited after 30 seconds of inactivity.


WARNING: When programming the parameters, the bushing must be locked in the current position, otherwise there is the possibility of obtaining a false measurement once you exit the programming mode. If this is not possible, it is recommended to check the device setting once back in measurement mode.


8.1 Input of numeric parameters

Press the key  the selected digit, flashing, increases in value up to 9 and then returns to 0.

If the first digit on the left is selected and the parameter can assume negative values, -1 will be displayed after digit 9 and, by pressing the key again, -.

It is possible to select the digit to be changed by

pressing the key . With each press, the digit to the right of the current one will be selected. If the selected digit is already at the far right of the display, the selection will jump to the first digit on the left.

Press the key  to confirm the value entered. If the confirmed parameter is different from the one currently stored, the display will show the message **CHAnGd**.


WARNING: It is not possible to cancel the insertion of a parameter value but only to confirm the displayed one. If you do not want to change the value already stored, it is obviously possible to set it to the same value as before and check that the word **CHAnGd** does not appear. Or, by waiting 30s, the device will exit programming mode without saving the changes.

The value of any modified parameters is stored only when exiting the programming mode. If the operation was successful, the display will show the message **StorE**.

8.2 Programmable parameters (in alphabetical order)


Parameter	Description	Available options	Default
<i>dir</i>	Direction of measure. Sets the positive rotation direction of the shaft.	- - 0 anticlockwise 0 - - clockwise	- - 0
<i>diSPL</i>	Display orientation	0° 180°	180°
<i>Offset</i>	Offset values	It is possible to store up to 10 offset value: OFS 0 ... OFS 9 The settable values depend on the resolution set as follows: Res = 1 : -19999 ÷ 99999 Res = 0.1 : -1999.9 ÷ 9999.9 Res = 0.01: -199.99 ÷ 999.99 Res =0.001: -19.999 ÷ 99.999	0

Parameter	Description	Available options	Default
<i>Origin</i>	Reference value	The settable values depend on the resolution set as follows: Res = 1 : -19999 ÷ 99999 Res = 0.1 : -1999.9 ÷ 9999.9 Res = 0.01 : -199.99 ÷ 999.99 Res = 0.001 : -19.999 ÷ 99.999	0.0
<i>Ptol1</i>	Tolerance of target position	The settable values depend on the unit of measure in use: mm : 0.01 ÷ 9.99 inches : 0.001 ÷ 0.393 degrees : 0.01 ÷ 9.99	mm : 0.10 inches : 0.004 Degrees : 0.10
<i>Radio</i>	RF settings	nEt id : id00 ÷ id99 nEt ch : ch01 ÷ ch36	Net id : 00 Net ch : 01
<i>rES</i>	Resolution of the displayed measure	Depending on the unit of measurement, the permitted values are: mm : 1; 0.1; 0.01 inches : 1; 0.1; 0.01; 0.001 degrees : 1; 0.1; 0.01 <i>An independent resolution is stored for each unit of measure.</i>	mm : 0.01 inches : 0.001 degrees : 0.01°
<i>SPEED</i>	Maximum permitted shaft rotation speed	300; 600; 1000	600


Parameter	Description	Available options	Default
<i>StEP</i>	Conversion coefficient between the number of shaft rotations and the selected unit of measure	<p><i>The programmable values depend on the selected unit of measure:</i></p> <p>mm: 0.01 ÷ 999.99</p> <p>inch : 0.001 ÷ 99.999</p> <p>degrees: 0.01 ÷ 999.99</p> <p><i>The step value for mm and inch is the same except for the appropriate conversion when viewing the measure. The Step value for degrees is, on the other hand, independent.</i></p>	001.00
" <i>t_Sho</i> "	<p>Display mode when the target is active.</p> <p>In the menu appears as the setting for the  key (<u> </u>0)</p>	<p>d_toGO</p> <p>or</p> <p>d_tArG:</p> <p>See chap. 7.8.5.</p>	d_toGO

Parameter	Description	Available options	Default
<i>tArGE</i>	Target positions	<p>It is possible to store up to 10 offset values: TG 01, ..., TG 32.</p> <p>The settable values depend on the resolution set as follows:</p> <p>Res = 1 : $-19999 \div 99999$</p> <p>Res = 0.1 : $-1999.9 \div 9999.9$</p> <p>Res = 0.01 : $-199.99 \div 999.99$</p> <p>Res = 0.001 : $-19.999 \div 99.999$</p>	0.0

8.3 Main menu tree

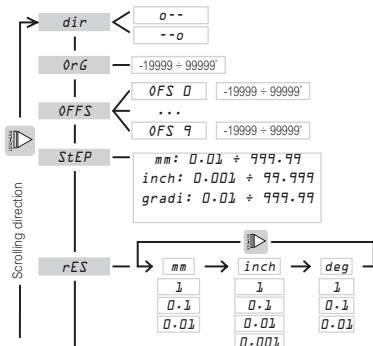


* The values must be divided by the number of decimal places of the resolution set.

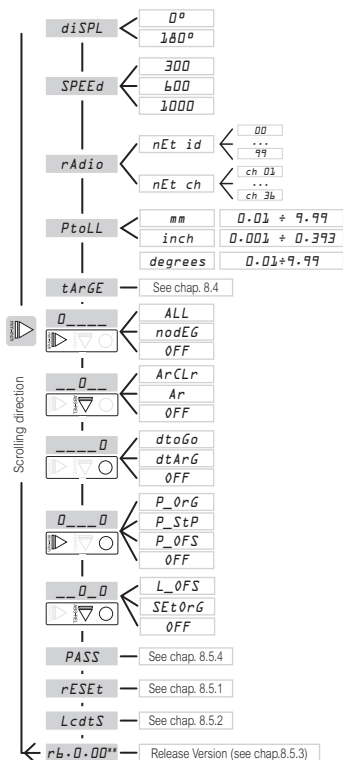

** The revision code may vary depending on the actual revision of the firmware loaded on the device.

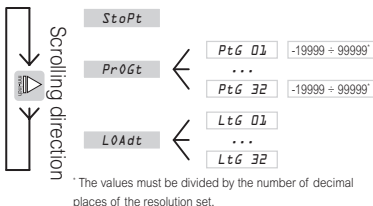

8.4 Target menu tree





8.5 Additional functions

8.5.1 Reset

To restore the factory settings on the device:

- select the voice **rESEt** from the main menu (see chap. 8.3)
- using the key  select **ALL**.
- press the key  to confirm.

To reset the only internal reference measure:

- select the voice **rESEt** from the main menu (see chap. 8.3)
- using the key  selezionare **0rG**.
- press the key  to confirm.

To exit the reset command, press the key  or:

- using the key  select No.
- press the key  to confirm.

8.5.2 LCD test

The **LcdtS** item in the main menu allows you to turn on all the segments and symbols of the display to check that it is working correctly.

8.5.3 Device version

The device version code is displayed as the last item of the main menu, with the **r** as the first character. By pressing the key



several times, other data are displayed which, if support is required, must be noted and provided to Elesà.

WARNING: A variation of the last two digits in the revision code has no impact on the device's features and performance.

8.5.4 Password


You can avoid unwanted access to the device menu by choosing "**on**" in the **PASS** menu item. In this case to enter the menu the password 22011 must be inserted.

9. Battery replacement



The internal lithium battery CR2450 - 3.0 V guarantees a battery life up to 3 years (up to 2 years for RF). The symbol

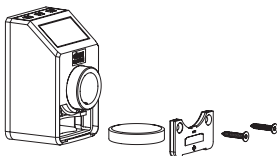

appears on the display when the battery needs replacing. To replace the battery, simply remove the battery cover without removing the indicator from the drive shaft, keeping all the configuration parameters unchanged. The cover is screwed with two TORX T6 screws. To facilitate the removal of the battery from the battery compartment, the use of a magnet is recommended.



10. Display messages and troubleshooting

Message on the display	Description	Action
-----	The value cannot be displayed because it exceeds the capacity of the display (-19999;99999)	In operational mode, the device continues to correctly measure the position of the shaft. If the measured value is within the capacity of the display, it will be shown correctly. If you are viewing a parameter, the problem may be due to the difference in units of measure between when it was set and when it is displayed. Change the current unit of measure and try again to view the parameter. Attempting to change a parameter when the display shows -----, automatically returns the parameter to the first value that can be displayed, losing the initial setting.
S_Err	The shaft has exceeded the maximum permitted rotation speed.	Press the key  to go back to reading the measured value.
 Flashing battery symbol	Low Battery	Replace the battery as soon as possible (see chap. 9).

EU DECLARATION OF CONFORMITY (DoC)

COMPANY NAME:	Elesa S.p.a.
POSTAL ADDRESS:	Via Pompei 29
POSTCODE AND CITY:	20900 Monza
TELEPHONE NUMBER:	+39 039 28111
E-MAIL ADDRESS:	info@elesa.com

Declare that the DoC is issued under our sole responsibility and belongs to the following product:

PRODUCT:	Electronic Position Indicators
APPARATUS MODEL:	DD51-E-RF
TRADE MARK:	Elesa

The object of the Declaration described above is in conformity with the relevant Union Harmonization Legislation:

2014/53/EU (RED) Radio Equipment Directive
2011/65/UE (RoHS) Restriction of the use of certain Hazardous Substances in electrical and electronic equipment

The following harmonized standards and technical specifications have been applied:

EN 62311:2008
EN 61010-1:2010
ETSI EN 301 489-1 V2.1.1
ETSI EN 301 489-1 V2.2.3
ETSI EN 301 489-17 V3.1.1
Draft ETSI EN 301 489-17 v3.2.2
EN 61326-1:2013
ETSI EN 300 328 V2.2.2

Notified Body:

Not Involved (Annex II - Conformity Assessment Module A)

Additional information:

Software Version: 5.1 or higher

PLACE, DATE OF ISSUE:	CARLO BERTANI
Monza – Italy	MANAGING DIRECTOR
03/11/2021	GENERAL MANAGER

Elesa S.p.A., Monza, September 2023

The texts and examples have been written with great care, nonetheless, mistakes can always happen.

The Company Elesa S.p.A. can neither be held legally responsible nor liable for lacking or incorrect information and the ensuing consequences.

The Company Elesa S.p.A. reserves the right to alter or improve the electronic position indicators or parts of them and/or the enclosed brochures without prior notice.



ELESA S.p.A.
Via Pompei, 29
20900 Monza (MB) Italy
phone +39 039 28111
info@elesa.com
www.elesa.com

© COPYRIGHT ELESA 2023
Art. Nr. ZZDOIU-DD51E-EN-R02
DDEMAN-001-12IT